



Note: If manual reset not needed,
 RTS-RESET can be connected
 directly to the MCLR input (pin 1).
 (eliminate R1, R2, and D1)